

**Supplier and Fire Extinguisher**

<i>Manufacturer</i> Presto AB	<i>Telephone</i> +46 10-45 20 000	<i>Name</i> Powder 6 kg	<i>Article No.</i> 198500	<i>Model</i> Presto PG6R
<i>Technical Questions</i> Göran Hult	<i>Approval No.</i> CE-0409		<i>Temperature Range</i> -30°C - +60°C	<i>Classification</i> 55A 233B C
<i>Standard</i> <input checked="" type="checkbox"/> EN 3 <input type="checkbox"/> EN 1866 <input type="checkbox"/> ISO 7165		<i>Function Principle</i> <input checked="" type="checkbox"/> Pressurised <input type="checkbox"/> Cartridge		<i>Certification</i> SP216-22
<i>Comment</i>				

**Technical data - Components**

<i>Extinguishing Agent</i> Prestolit ABC	<i>Amount</i> 6 kg	<i>Article No.</i>	<i>Comment</i>
<i>Propellant Gas</i> Nitrogen	<i>Charging Pressure</i> 14,5 ± 0,5 bar		<i>Comment</i>
<i>Valve</i> Clamp valve, complete		<i>Article No.</i> 104526	<i>Comment</i>
<i>Gauge</i> Gauge, 23 M10 x 1 x 12,5 mm	<i>Scale</i> 0-10-18-27	<i>Article No.</i> 47792	<i>Comment</i> See below
<i>Safety Device</i> Spring loaded	<i>Trigger Pressure</i> 24-28 bar	<i>Article No.</i> 47581	<i>Comment</i>
<i>Nozzle</i> Hose including nozzle	<i>Marking</i>	<i>Article No.</i> 47425	<i>Comment</i> L = 450 mm
<b>Other Common Spare Parts and Accessories</b>			
<i>Name</i> O ring, 26,2 x 3,0 mm Valve cone Hose holder			<i>Article No.</i> 4733 4775 4707
<i>Comment</i>			

**Service Instructions**

<b>Service and Replacement Interval</b>			
<i>Part</i>	<i>Service and replacement Interval / Measure</i>		
<input checked="" type="checkbox"/> Extinguishing Agent	Can be refilled with original Prestolit ABC Powder _____		
<input checked="" type="checkbox"/> Vessel	Internal and external ocular inspection at shop examination. Check threads _____		
<input type="checkbox"/> Cartridge	_____		
<input checked="" type="checkbox"/> Hose	Check in regards to free flow, fractures, fastenings, nipples. Replace when defect _____		
<input checked="" type="checkbox"/> Neck Packing	Replace when recharging _____		
<input checked="" type="checkbox"/> Valve Spindle	Check and clean when recharging _____		
<input checked="" type="checkbox"/> Gauge	Check annually _____		
<input checked="" type="checkbox"/> Spring Device	Replace if there is a leakage _____		
<b>Special Service Instructions</b>			
<i>Valve Torque</i> 20-60 Nm	<i>Safety Valve Torque</i> 10 Nm		
<i>Comment</i> Special tool needed for testing of manometer, article no. 4791			
<b>Special Safety Instructions</b>			
<i>Comment</i> None, except general instructions in manual. UN no. 1044			
<b>Special Environmental Instructions</b>			
<i>Comment</i> None, except general instructions in manual, see goods descriptions			

**Revision**

<i>Date</i>	<i>Change</i>	<i>Signature</i>	<i>Approval</i>